


Ventilrammer

Ventilramme m/gummilæbe

TW3*

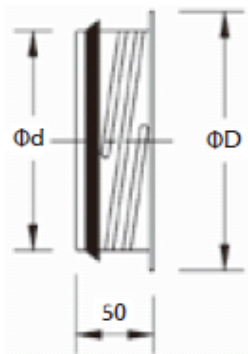

\emptyset	$\emptyset D(\text{mm})$	$\emptyset d(\text{mm})$
100	125	99
125	150	124
160	185	159
200	225	199